




Step 1

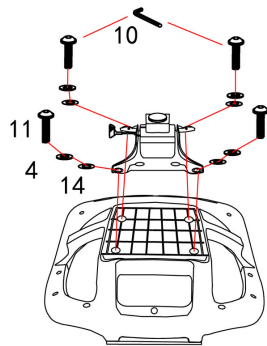


Step 2

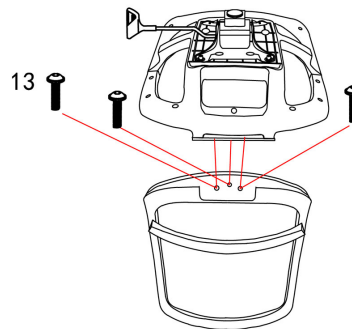


Step 3

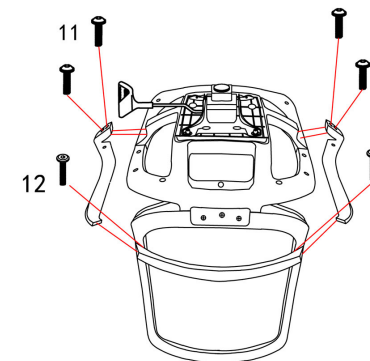

Step 4

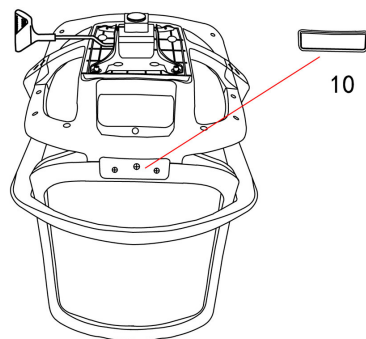

Step 4

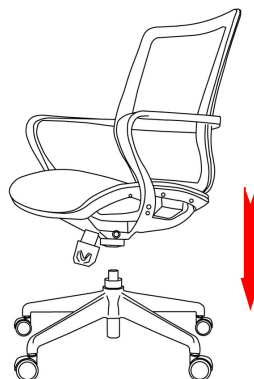

Step 5



Step 6



OHE-99negro

| NO.    | 1    | 2          | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11      | 12      | 13      | 14   |
|--------|------|------------|------|------|------|------|------|------|------|------|---------|---------|---------|------|
| SKETCH |      |            |      |      |      |      |      |      |      |      |         |         |         |      |
| SIZE   |      | Lift&right |      | M6   |      |      |      |      |      |      | M6*20mm | M6*20mm | M6*20mm | M6   |
| QTY    | 1pcs | 2pcs       | 1pcs | 4pcs | 1pcs | 1pcs | 1pcs | 1pcs | 5pcs | 1pcs | 8pcs    | 2pcs    | 3pcs    | 4pcs |



OFFIMOBILE

OffiMobile | Instructivo de armado

WhatsApp 81 1625 4572 | ventas@offimobile.com.mx | offimobile.mx